


www.skyfactory.com •

toll free 1.866.759.3228

Classic w/ EcoPlus Electrical Instructions (24PS HLG)

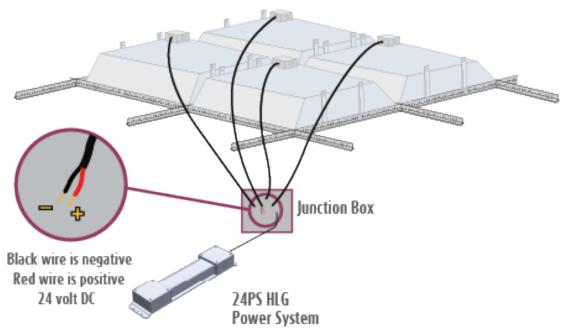

Installation Packet Includes:

Classic w/ EcoPlus Electrical Instructions (24PS HLG)

Installation specific wiring diagram (where applicable)

EcoPlus and EcoSlim Drawings and Charts (24PS HLG) Wiring Diagrams EL001199, EL001423, EL001447, EL001454, EL001455

Sky Factory 24PS HLG Power System Dimensions and Weights

For technical support at any time during the installation, please call us **toll free at 866-759-3228.** We want your installation to go as smoothly as possible. Thank you for choosing Sky Factory.

Classic w/ EcoPlus electrical requirements:

EP22 Series: EP22 (2' x 2'), EP22M (60cm x 60cm), EP22G (62.5cm x 62.5cm) EP24 Series: EP24 (2' x 4'), EP24M (60cm x 120cm), EP24G (62.5cm x 125cm) NOTE: For custom sizes, see installation specific wiring diagram included (where applicable)

All EcoPlus fixtures are 24V DC only.

EcoPlus fixtures must be mounted in dry locations only.

EcoPlus fixtures must be powered by provided UL, CSA and CE Compliant 24PS HLG Power System

Sky Factory 24PS HLG Power System:

Input (Typ): 90-305V, 47 - 63 Hz Output: 24V DC Maximum Watts (useable) per power system: 600 Watts Available sizes: 40W, 60W, 80W, 100W, 120W, 150W, 185W, 240W, 320W, 480W, 600W Power System aluminum enclosure Mounted on baseplate with junction box on input and output ends For mounting dimensions and weights, see "EcoPlus and EcoSlim Drawings and Charts (24PS HLG)" For power system wire sizes, see "EcoPlus and EcoSlim Drawings and Charts (24PS HLG)". Power system must have 2" clearance for air flow. Wall mount recommended. Power system must be mounted in dry locations. Power system is specified for Sky Factory EcoSlim and EcoPlus fixtures only.

For installations with multiple power systems, see

installation specific wiring diagram included (where applicable)

For EcoPlus with 24PS HLG Power System wiring diagrams, see

"EcoPlus and EcoSlim Drawings and Charts (24PS HLG)"

For installations with one or more custom sizes, see also

installation specific wiring diagram included (where applicable)

RF filter, if used, is <u>not</u> provided by the Sky Factory. One filter per power system required.

Classic w/ EcoPlus electrical requirements (cont'd):

Sky Factory provided dimmer control (where specified):

Lutron Diva DVSTV 0 - 10V dimmer/switch (UL & CSA compliant) Input: auto-ranging 120 - 277V AC

Lutron Diva DVTV 0 - 10V dimmer/switch and PP-DV power pack (UL & CSA compliant) Input: auto-ranging 120 - 277V AC

Lutron Diva mounts in standard single-gang electrical box White standard, other colors available on request

Jung 240-10 dimmer/switch and external relay where specified (CE compliant) Input: 230 - 240V AC Installs in appliance box to DIN 49073

For dimming requirements, see page 6.

For dimmer wiring diagrams, see dimmer control (and relay where specified) and wiring diagrams included

For other dimmer controls provided, see installation specific wiring diagram included (where applicable)

Electrical work must be performed by a qualified electrician who is familiar with DC lighting systems and must conform to all local and national codes.

Non-Dimmable and Dimmable Certification:

ES22 Series, ES24 Series, ES26 Series, ES33 Series, ES34 Series, ES36 Series, ES44 Series, ESCST Series, EP22 Series, EP24 Series, EP26 Series, EP33 Series, EP34 Series, EP36 Series, EP44 Series, EP46 Series and EPCST Series fixtures when used with 24PS HLG Power System UL, CSA and CE Listed by Intertek Group plc See also "EcoPlus and EcoSlim Drawings and Charts (24PS HLG)" and installation specific wiring diagram (where applicable)

| EcoPlus Lighting System - EP22 and EP24 Series | | | | |
|--|-------------------------------|---------|----------------|---------------|
| | | | System Wattage | Input Current |
| TSF Model No. | Dimensions: WxLxH | Weight | (Max) | @ 24 Volts DC |
| | | | | |
| EP22 | 23.6 x 23.6 x 5.63 (inches) | 4.0 lb | 23 | 0.96 A |
| EP24 | 23.75 x 47.75 x 5.85 (inches) | 11.7 lb | 47 | 1.96 A |
| | | | | |
| EP22M | 58.9 x 58.9 x 14.3 (cm) | 1.8 kg | 23 | 0.96 A |
| EP24M | 59.4 x 119.4 x 14.86 (cm) | 5.31 kg | 47 | 1.96 A |
| | | | | |
| EP22G | 61.4 x 61.4 x 14.3 (cm) | 2.1 kg | 23 | 0.96 A |
| EP24G | 61.9 x 124.4 x 14.86 (cm) | 5.31 kg | 47 | 1.96 A |

NOTE: For custom sizes, see also installation specific wiring diagram (where applicable)

Notice: The LED fixtures are 24V DC ONLY.

AC voltage connected directly to the fixtures will destroy the lighting system.

Fixtures are wired together in <u>single or multiple circuits</u>. Each circuit is <u>dedicated to a single power system</u> and may be arranged in rows or clusters, depending on installation.

<u>A junction box with 1/2" trade size knock-outs</u> is attached on top corner of each fixture.

- Power leads inside fixture junction box are <u>polarized, red (+) and black (-)</u>.
- Fixture wire size 18 AWG stranded.

Step 1 continued

Wiring from fixtures to V DC side of provided power system is <u>polarized</u>, <u>positive (+)</u> to <u>positive (+)</u> and <u>negative (-)</u>:

EcoPlus fixture red "+" to power system **Vo+**

EcoPlus fixture black "—" to power system **Vo**—

For power system V DC wire sizes, see "EcoPlus and EcoSlim Drawings and Charts (24PS HLG)"

HLG-480H-24B and HLG-600H-24B have two sets of ouput leads. Meanwell recommends loading no more than:

240 Watts on each set of cables for HLG-480H-24B

480 Watts on each set of cables for HLG-600H-24B

Wire and additional junction boxes from fixtures to power supply provided by others.

Wire gauge must conform to local and national codes. Voltage drop of no more than 2% is recommended.

Step 2: Wiring the power system to source V AC

Run power to V AC side of the power system.

For power system V AC wire sizes, see "EcoPlus and EcoSlim Drawings and Charts (24PS HLG)"

Line to power system **ACL**

Neutral to power system ACN

Ground to power system 😔 (GREEN/YELLOW)

Wire gauge must conform to local and national codes.

Install the power switch on the V AC input side of the power system.

Step 3: Dimming requirements

Contact the Sky Factory if you plan on using a dimming system provided by others.

Notice: Dimming using non-approved systems may permanently damage LED's and will void the warranty!

Wiring a Sky Factory provided dimmer control:

To wire the dimmer control (and external relay where specified), refer to wiring diagram included with dimmer and relay and "EcoPlus and EcoSlim Drawings and Charts (24PS HLG)", and installation specific wiring diagram included (where applicable.)

Step 4: Checking the polarity

Notice: CHECK THE POLARITY <u>BEFORE TURNING ON POWER</u>. MAKE SURE: <u>Red wires on the fixtures go to the "+" terminals of the power supply</u> <u>Black wires on the fixtures go to the "-" terminals of the power supply</u> <u>IF THE SYSTEM IS WIRED BACKWARD, IT WILL DESTROY THE LED'S!</u>